

**Szczegółowy wykaz urządzeń zdefiniowanych na platformie i wspierających video streaming:**

**APPLE:** iPhone, iPhone 3G, iPhone 3GS, iPhone 4, iPad

**ASUS:** 1210, A10, A50, GalaxyII, GalaxyMini2, M530w, P550, P552, P750, Zest

**ACER:** E101, E110, Liquid, neoTouch

**ALCATEL:** OT-600, OT-606, OT-710D, OT-799, OT-802, OT-806, OT-807, OT-808, OT-880, OT-C717, OT-S621, OneTouch I650

**AMOI:** Amoi 8505, Amoi 8709, Amoi NewYork, Amoi VDA GPS

**ANDROID:** Android Dev Phone 1

**ASUS:** Garmin Nuvifone G60, M930, P320 Galaxy Mini, P526, P527

**BENQ SIEMENS:** C81, EF81, EL71, M7, S81

**BLACKBERRY:** 8100, 8110, 8120, 8220, 8300, 8310, 8320, 8520, 8530, 8800, 8820, 8830, 8900, 9000, 9100, 9300, 9500, 9520, 9530, 9550, 9630, 9650, 9700, 9780, 9800, 9810, Pearl

**GARMIN ASUS:** G60, M10

**GIGABYTE:** Boston, GSmart T600

**GOOGLE:** Nexus S

**HP:** iPAQ 610, iPAQ 910, iPAQ Data Messenger, iPAQ Voice Messenger, iPAQ hw6500, iPAQ hw6900, iPAQ hw6920

**HTC:** Ameo, Aria, ChaCha, Desire, Desire HD, Desire S, Desire Z, Gratia, HD mini, HD2, HD7, Hermes, Hero, Incredible S, Legend, MP6950, Magic, Maple, Nexus One, P3400, P3600, P3650 Touch Cruise, P3700 Touch Diamond, P4550, P5500, P5520, Passion, Pilgrim, S630, S730, S740, Sensation, Smart, Snap, Streaming Player, Tattoo, Touch 2, Touch 3G, Touch Cruise, Touch Diamond2, Touch Dual, Touch HD, Touch Pro, Touch Pro2, Touch Viva, TyTN, TyTN II, Wildfire, Wildfire S, X7500

**HUAWEI:** 840, G6600, G7002, G7007, S7, U120, U1250, U1280, U1310, U5700, U7200, U7510, U7519, U7520, U8100, U8110, U8220, U8300, U8500, U8800

**LG:** A200, A225, A250, A310, BL20, BL40, BL42, C100, C320, C330, C660, CB630, CU500, CU575, E720, GB220, GC900, GD510, GD550 Pure, GD580 Lollipop, GD880 Mini, GD900, GM200 Brio, GM360, GM730, GM750, GS290 Cookie Fresh, GS500 Cookie Plus, GS505, GT350, GT400, GT405, GT500, GT505, GT540, GU230 Dimsun, GU280, GU285, GW305, GW520, GW620 Eve, GX500, HB620T, KB620, KB770, KC550, KC780, KC910, KC910i, KE858, KE970, KF301, KF310, KF510, KF600, KF700, KF750, KF755 Secret, KF900, KG90, KG920, KM380, KM555, KM570, KM900 Arena, KP170, KP500 Cookie, KP501, KP505, KP550, KS20, KS360, KS365, KS500, KT520, KT525, KT610, KT878, KU250, KU311, KU380, KU450, KU800, KU990, KU990i, LG620G, ME550, MG280, Optimus 3D P920, Optimus Chat, P350, P500, P520, P525, P690, P970, P990, T300, T310, T320, T500, T530, TU500, TU550, TU575, TU720, TU915, U300, U370, U8110, U8210, U8550, U900

**MDA:** Compact IV, Compact II, Pro, Vario, Vario II, Vario III, Vario IV, Vario V, compact III

**MOTOROLA:** A1000, AURA, Backflip, C975, Defy, E770, EM30, EX112, EX115, EX122, EX128, K1, KRZR K3, L6, L7, MB200, MB511, MILESTONE 2, Milestone, Milestone XT720, Quench, RAZR V9, RAZR maxx V6, RAZR2 V8, ROKR E8, ROKR Z6, U9, V1050, V1075, V3x, V3xx, V8, V975, V980, VE538, VE66, W375, W377, W510, WX390, ZN200

**NEC:** E540

**NOKIA:** 2220 slide, 2330, 2600 classic, 2610, 2630, 2680 slide, 2690, 2700 classic, 2710, 2720 fold, 2730 classic, 3109 classic, 3110, 3120 classic, 3230, 3250, 3500 classic, 3600 slide, 3610 fold, 3720 classic, 5000, 5130, 5200, 5220 XpressMusic, 5228, 5230, 5233, 5235, 5238, 5250, 5300, 5310 XpressMusic, 5320 XpressMusic, 5500, 5530, 5610 XpressMusic, 5611, 5630, 5700 XpressMusic, 5730, 5800, 6020, 6030, 6085, 6086, 6101, 6103, 6110 Navigator, 6111, 6120 classic, 6121 classic, 6124 classic, 6125, 6131, 6136, 6151, 6208 classic, 6210 Navigator, 6220 classic, 6230, 6230i, 6233, 6234, 6260, 6267, 6270, 6280, 6288, 6290, 6300, 6301, 6303 classic, 6303i classic, 6350, 6500 classic, 6500 slide, 6555, 6600, 6600 fold, 6600 slide, 6600i, 6610i, 6630, 6650, 6670, 6680, 6700 classic, 6700 slide, 6710 Navigator, 6720 classic, 6730 classic, 6760 slide, 6788, 6788i, 6790 Surge, 6790 slide, 7210, 7230, 7310 Supernova, 7370, 7373, 7390, 7500, 7600, 7610, 7610 Supernova, 7900, 8600 Luna, 8800, 8800 Sirocco Edition, 9300, 9500, C1-01, C1-02, C2-01, C2-02, C3, C3-01, C5, C5-01, C5-03, C6, C6-01, C7-00, E5, E50, E51, E52, E55, E6-00, E60, E61, E61i, E63, E65, E66, E7-00, E70, E71, E72, E73 Mode, E75, E90, N70, N71, N72, N73, N75, N76, N78, N79, N8, N80, N81, N82, N85, N86, N90, N91, N92, N93, N93i, N95, N95 8GB, N96, N97, N97 mini, X2, X2-01, X3, X3-02, X5-01, X6

**PANASONIC:** VS6

**PANTECH:** C520, PG-3700, PG-8000

**PHILIPS:** 9A9W

**SPV:** C600, E610, E650, M3000, M3100, M500, M5000, M650

**SAGEM:** My400X, My411V, My511X, My600x, My700x, My750C, P9522 Porsche, VF540

**SAMSUNG:** A867, B2100, B5702, B7320 OmniaPRO, B7330, B7610, C3050, C3053, C3630, C5130, C5212, E2370, E2510, E2550, GT-B2710, GT-B3313, GT-B3410, GT-B5310, GT-B7300, GT-B7350, GT-B7620, GT-B7722, GT-C3200, GT-C3212, GT-C3222, GT-C3300 Champ, GT-C3300K, GT-C3303, GT-C3322, GT-C3500, GT-C3510, GT-C3530, GT-C3560, GT-C3750, GT-C3752, GT-C5010, GT-C5510, GT-C6620, GT-C6712, GT-E2130, GT-E2152, GT-E2222, GT-E2230, GT-E2232, GT-E2330, GT-E2530, GT-E2652, GT-E3210, GT-I5500, GT-I5510, GT-I6230, GT-I8510, GT-I8910, GT-I9000, GT-I9100 Galaxy S II, GT-M3310, GT-M3710, GT-M8800, GT-M8910, GT-M8920, GT-S3310, GT-S3350, GT-S3370, GT-S3650, GT-S3653, GT-S3770, GT-S5230, GT-S5233A, GT-S5233T, GT-S5250 Wave525, GT-S5253, GT-S5260 Star II, GT-S5330, GT-S5350, GT-S5510, GT-S5520, GT-S5530, GT-S5550, GT-S5570, GT-S5600, GT-S5620, GT-S5750, GT-S5780, GT-S5830, GT-S6888, GT-S7200, GT-S7230, GT-S7330, GT-S8000, GT-S8003, GT-S8500, GT-S8530 Wavell, Galaxy Gio, I5700, I5800 Galaxy 3, I7500 Galaxy, I9001 Galaxy S Plus, I9003 Galaxy S SCL, M2710, M3510, M7500, M7600, M7603, P1000 Galaxy Tab, P930, S3030, S3600, S3600i, S3850 Corby II, S5200, S7220, S7230E, S7350, S7350i, S8000, S8300, S9402, SCH-R900, SCH-W709, SGH-A516, SGH-A706, SGH-A717, SGH-A736, SGH-A737, SGH-A766, SGH-A777, SGH-A837, SGH-A877, SGH-B2700, SGH-B500, SGH-D500, SGH-D528, SGH-D730, SGH-D780, SGH-D880, SGH-D900, SGH-D900E, SGH-D900i, SGH-D908, SGH-D980, SGH-E215, SGH-E250, SGH-E251, SGH-E258, SGH-E590, SGH-E747, SGH-E890, SGH-F250, SGH-F258, SGH-F278, SGH-F308, SGH-F330, SGH-F480, SGH-F488, SGH-F490, SGH-F700, SGH-G400, SGH-G800, SGH-G810, SGH-I6410, SGH-I8320, SGH-I897, SGH-J200, SGH-J400, SGH-J610, SGH-J630, SGH-J700, SGH-J700i, SGH-J706, SGH-J708, SGH-J750, SGH-J770, SGH-J800, SGH-L170, SGH-L320, SGH-L700, SGH-L760, SGH-L780, SGH-L811, SGH-L870, SGH-P240, SGH-P250, SGH-P270, SGH-P910, SGH-S366, SGH-T359, SGH-T459, SGH-T469, SGH-T509, SGH-T669, SGH-T749, SGH-T819, SGH-T929, SGH-T959, SGH-U100, SGH-U600, SGH-U700, SGH-U800, SGH-U900, SGH-U908, SGH-X708, SGH-X810, SGH-Z105, SGH-Z150, SGH-Z170, SGH-Z230, SGH-Z300, SGH-Z368, SGH-Z370, SGH-Z400, SGH-Z500, SGH-Z540, SGH-Z560, SGH-Z630, SGH-Z720, SGH-ZV40, SGH-i200, SGH-i320, SGH-i450, SGH-i520, SGH-i550, SGH-i560, SGH-i600, SGH-i607, SGH-i616, SGH-i617, SGH-i637, SGH-i6420, SGH-i7110, SGH-i718, SGH-i728, SGH-i780, SGH-i8330, SGH-i8510, SGH-i900, SGH-i908, SGH-i908E, SWD-V300, T849 Galaxy Tab, i8000

**SHARP:** 1810C, 550SH, 903, TM-200

**SONY ERICSSON:** C510, C702i, C901, C902i, C903, C905, Cedar, D750i, E10i, E15i, F100i, F305, G502, G700, G705, G900, Hazel, J105i, J10i, J20i, J220i, K300i, K310i, K320i, K500i, K510i, K530i, K550i, K600i, K610i, K660i, K700, K700i, K750i, K770i, K790i, K800i, K810i, K850i, K999, M1i, M600i, P1i, P910i, P990i, S302, S312, S500i, T303, T650i, T700, T715, TM717, U100i, U10i, U1i, U5i, Vivaz pro, W100i, W200i, W205, W20i, W300i, W302, W350i, W380i, W518, W580i, W595, W610i, W660i, W705, W715, W760i, W800i, W810i, W850i, W880i, W890i, W900, W910i, W950i, W960i, W980i, W995, X1, X2, XPERIA Arc, XPERIA Neo, XPERIA PLAY, XPERIA X10, XPERIA X10 mini pro, Xperia Pro, Xperia mini, Xperia mini pro, Yendo, Z520i, Z530i, Z610i, Z710i, Z770i

**T-MOBILE:** G2, G2 Touch, Juno, Leo, Maple, Rhodium, myTouch 3G, myTouch 4G

**TOSHIBA:** G910, TG01

**VODOFONE:** 1520, 541, 543, 547, 553, 710, 715, 716, 725, 735, 736, 810, 830, 845, 902T, Indie

**XDA:** Argon, Atmos, Mini S, Neo, Orbit, Trion

**ZTE:** BLADE, F102, F103, F160, F230, F232, F912, MD-900, MD301, T100, V9, X671, X760, X930, X991